


Galaxy 2 Series Trigger Lead

The Trigger Lead allows access to the outputs and inputs on the Trigger Header on the Galaxy 2 Series main PCB. Simply plug the connector on to the 12-way header in the middle of the panel PCB, then bare the cores at the other end for connection to an external communicator.

WARNING: Always ensure that all power is disconnected when working with the Trigger Lead.

The available cores on the 12-way ribbon cable have the following function:

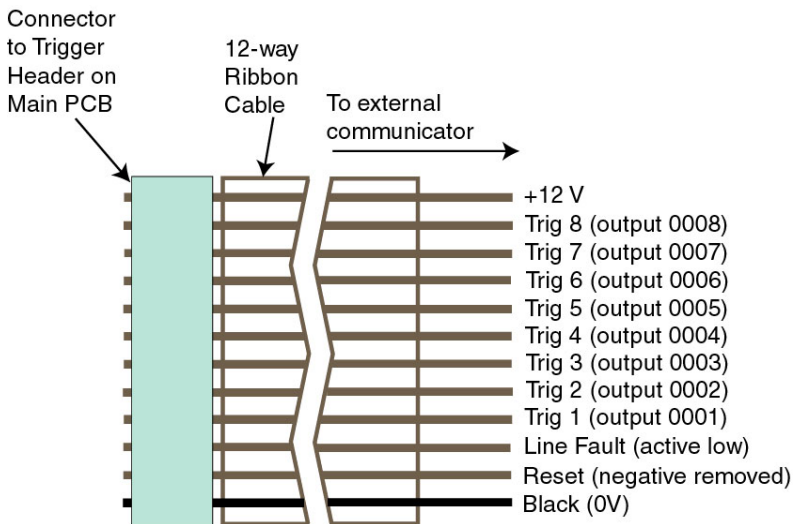

The function of the trigger outputs can be programmed as outputs 0001 to 0008 in menu 53.

EN50131 Compliance

This product is suitable for use in systems designed to comply with EN50131-1 and PD6662:2004.

Security Grade – 2
Environmental Class – II

